

## Self learning of Remote Control in order to operate with up to 4 Remote Controls 1 Parking Lock or with only 1 Remote Control more than 1 Parking Lock

1. Open the black cover and remove it.
2. Take out the battery in order to open the latches of the white cover
3. Open the latches and remove the cover
4. Reinsert the battery.
5. Remove the cover of the small white box.
6. Press the small white or black button (See figure, depends on model) until the indicator light flashes **3 times** in order to deactivate the code.
7. After that wait **10** seconds and press the small black button again **only for a short time**. As soon as the indicator light flashes again **3 times**, press one button of the remote control also only for a short time, for example the left button.
8. Now you can operate with up to 4 remote controls one Parking Lock or with one remote control multiple Parking Locks. Please ensure that the same button will always be used. Only one button is needed for operating the Parking Lock up and down.
9. In order to learn the second, third and fourth remote control, repeat **only** the procedure under point **7**

