



EURO-COIN-SORTER

Der Münz-Sortier- und Spar-Automat für Zuhause, Büro und Gewerbe – Ihre Mini-Bank für €-Münzen.

The Coin Sorter and Money Saving Machine for Home, Office and small Businesses. Your Mini Bank for €-Coins

Art./Part No 3700 CE



Bis zu 20 verschiedene Münzen gleichzeitig in den Behälter werfen.

Gradually pour up to 20 coins into the coin chamber at one time.



Zum Start und zur Beendigung des Sortievorgangs einfach den Knopf drücken.

To start and finish sorting, press the Power Button.



Zur Entnahme Münzröhrenschacht einfach herausziehen und gefüllte Münzröhren herausnehmen.

To remove: Gently slide the Coin Tube Tray out by pulling on the Finger Slot and remove the filled Coin Tubes.



Münzen entweder in vorgefertigte Münzhülsen umfüllen, oder in konventionelles Papier rollen.

Fill Coins into preformed Wrappers, or roll Coins in conventional Paper.



Vorgefertigte Münzhülsen
Preformed Wrappers
Art./Part No 3701



Integrierter Überlaufbehälter.
Overflow Tray.



Zwei 1,5 Volt C Batterien erforderlich. (Nicht enthalten)
Requires two 1,5 Volt C Batteries. (Not included)

Ideen für's Sparen
Money Saving Ideas

BETEC

TROUBLESHOOTING GUIDE


PROBLEM	CAUSE	SOLUTION
Motor does not run when sorter is switched ON.	Batteries are inserted incorrectly. Batteries are low or dead. Coins are bent, worn, nicked or dirty.	Check batteries for proper installation. Replace batteries. Remove defective coins and try again.
Coins do not sort properly.	Coins are bent, worn, nicked or dirty. Sorter is not on a flat level surface.	Remove the coins and try again. Place sorter on desk or table.

Coins are diverted to
OVERFLOW TRAY before
COIN TUBES are full

BATTERY INFORMATION

- Take special care to ensure batteries are inserted correctly, observing (+) and (-) polarities on batteries and product.
- Use of Rechargeable Batteries is NOT recommended for this product.
- Do not attempt to recharge non-rechargeable batteries.
- Avoid short circuiting the contacts in the battery compartment or the battery terminals.
- Remove exhausted batteries from the product.
- Do not mix old (used) and new batteries or different types of batteries.
- Only use batteries of the same or equivalent type to those recommended.
- Do not attempt to power battery products by the introduction of mains supply or separate power supplies, and do not attempt to plug any part of this product into the mains supply.
- Dispose of exhausted batteries safely, and never dispose of batteries in a fire.
- Do not dispose of empty batteries with household refuse but treat them as chemical waste.
- Remove batteries from product after use or if storing for long periods.
- Periodically examine product for signs of damage to electrical parts and do not use it until damage has been properly examined.
- Please retain this information for future reference.

MOTORISED
Euro Sorter

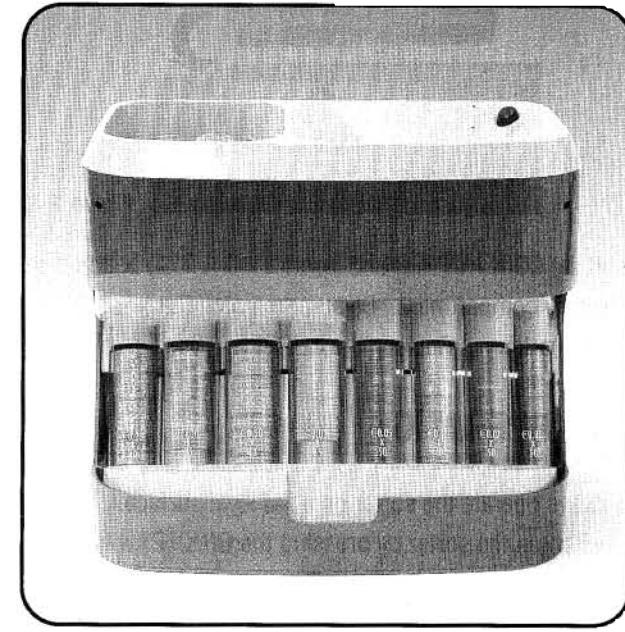

INSTRUCTIONS

The Motorised Euro Sorter Bank is designed to save time and money. Its new patent pending sorting technology is fast and easy to use. It sorts all Euro coins by value into separate tubes. Sit back, relax and watch your savings grow!

PLEASE READ ALL OF THE INSTRUCTIONS BEFORE USE.

BATTERIES

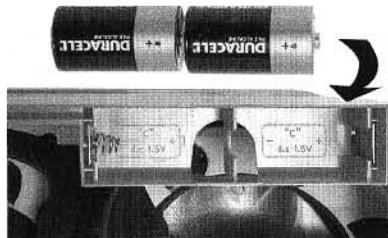


Figure 1

Lift off the COIN HOPPER and insert 2 x C (LR14) batteries into the battery compartment. Be sure to match the "+" and "-" polarity markings. Replace the HOPPER. (See Figure 1)

BASIC OPERATION

1. Always operate the sorter on a flat level surface.
2. Switch on the sorter by pressing the ON/OFF switch on the top right corner of the sorter.
3. Gradually pour not more than 20 coins into the COIN HOPPER at a time. The sorter will sort and fill the COIN TUBES.
4. If the COIN TUBES become full, the extra coins will divert to the OVERFLOW TRAY at the back.
5. Press the switch to turn off the sorter.

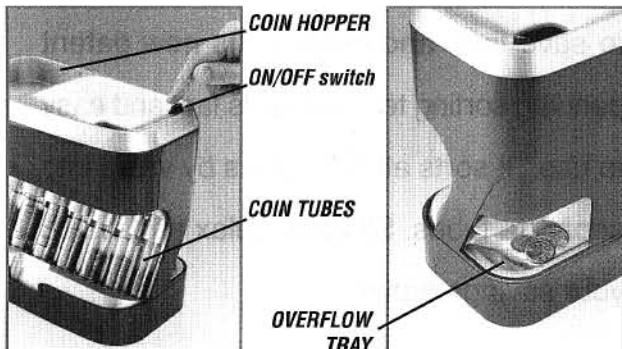


Figure 2

Figure 3

REMOVING THE COIN TUBES

One special feature of the Motorised Euro Sorter Bank is the COIN TUBES. To load or unload the COIN TUBES:

1. Make sure you switch off the sorter, then GENTLY slide out the COIN TUBE DRAWER by pulling on the FINGER SLOT in front of the bank. (See Figure 4 & 5)
NOTE: Do not force the drawer beyond the stop or Damage may occur!
2. Remove the desired COIN TUBES, empty and replace. Make sure you replace all of the COIN TUBES before sorting more coins.
3. Push back the COIN TUBE DRAWER into the bank and you are ready to start again.

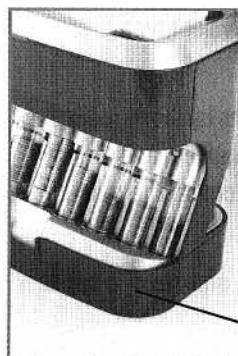


Figure 4

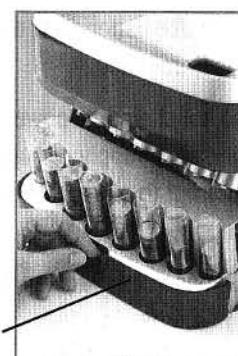


Figure 5

WRAPPING THE COINS

Fill coins into preformed wrappers or roll coins in conventional paper. (See Figure 6 below)

(*NOTE: Preformed wrappers not included.*)

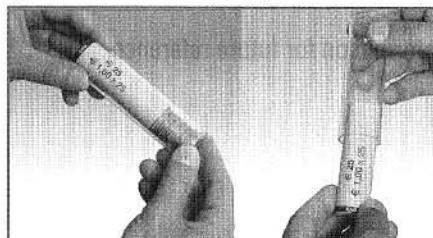


Figure 6

IMPORTANT

The coin sorter tubes are designed to hold the amount of coins indicated on each tube. (See Figure 7 below) When you open the COIN TUBE DRAWER some coins may spill into the OVERFLOW TRAY. If coins inadvertently spill inside the COIN TUBE DRAWER, remove the COIN TUBES and tilt the sorter backwards and forwards to let the coins slide out of the holes underneath.

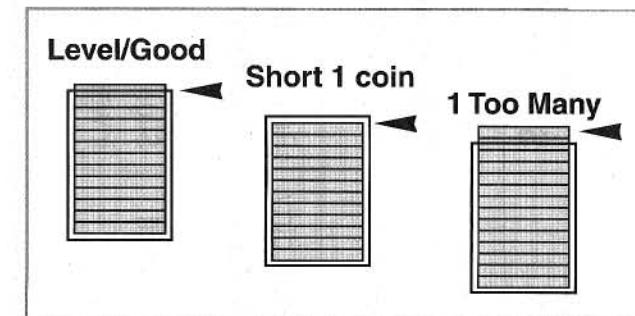


Figure 7

PLEASE NOTE

This product is not intended for high volume use and does not recognize damaged or extremely dirty coins.